

EXPO DOUBLE TOP



Tool-carrier with hydraulic widening

Available in version with front or rear three-point coupling

On demand: power take-off high (for rubber-tyred tractors - except S version), low (for crawler tractors) or with pumps directly connected to the tractor power take-off (for rubber-tyred and crawler tractors)

Kit including multiplier double pump, hoses, filter, tank and oil

Double heat exchanger with double thermostat

8-channel electronic control unit


Electro-hydraulic distributor to control 2 double effect cylinders

55 cm RH and LH side inter-row blades with multifunction joystick for manual emergency blade return

Bulldozer-like tilling spur

RH and LH toothed wheels for depth adjustment and side stability control

Model	CODE	CODE	CODE	CODE	CODE	CODE	CODE
Expo doppio TOP 1S	1090	50 - 70	25 + 25	100 / 150	20	140 / 202	485
Expo doppio TOP 1	0998	50 - 70	30 + 30	110 / 170	20	150 / 222	520
Expo doppio TOP 2	0999	50 - 70	40 + 40	125 / 205	20	165 / 257	555
Expo doppio TOP 2X	1127	50 - 70	50 + 50	133 / 233	20	173 / 285	505
Expo doppio TOP 3	0776	50 - 70	50 + 50	148 / 248	20	188 / 300	590
Expo doppio TOP 4	1000	50 - 70	50 + 50	200 / 300	20	240 / 352	625
Expo doppio TOP 1S telescopico	1205	50 - 70	35 + 35	105 / 175	20	145 / 225	525
Expo doppio TOP 1 telescopico	1232	50 - 70	50 + 50	113 / 213	20	153 / 263	560

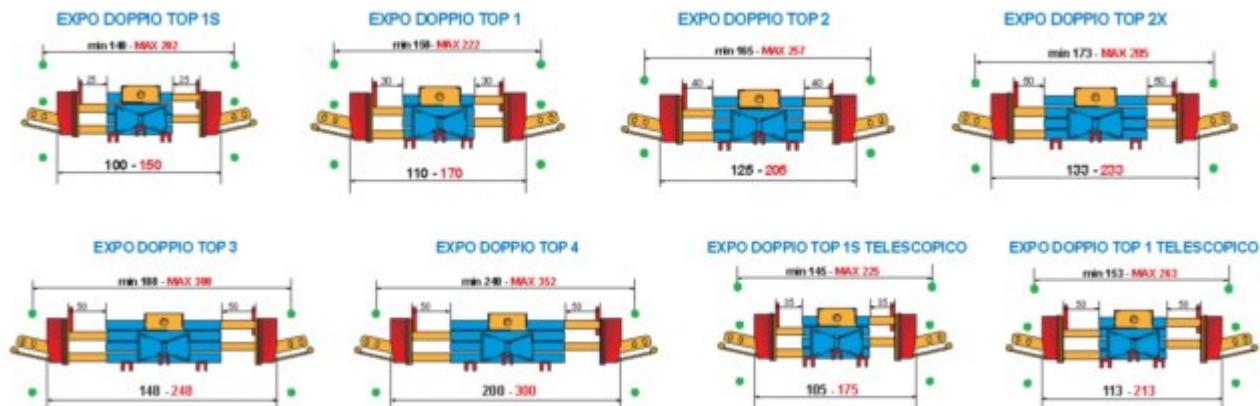

Optional

- CODE 1362 - Réversibilité pour porte outils modèle Expo Double, complète d'attelage à 3 points antérieurs/postérieure et triple prise de force avec cardan: postérieur 540 g/min D et antérieur 540 g/min D + 1000 g/min G
- CODE 1287 - Flow diverter system to control 2 double effect cylinders SEPARATELY with only 2 quick tractor couplings

- CODE 1158 - Button for immediate RH rotary brush / mower head wire rotation stop (applicable only during the order)
- CODE 1159 - Button for immediate LH rotary brush / mower head wire rotation stop (applicable only during the order)
- CODE 1147 - RH hydraulic wheel adjustment with 2 quick tractor couplings
- CODE 1148 - LH hydraulic wheel adjustment with 2 quick tractor couplings
- CODE 0698 - RH hydraulic inter-row inclination with 2 quick tractor couplings. Dimension cm 6,5
- CODE 0724 - LH hydraulic inter-row inclination with 2 quick tractor couplings. Dimension cm 6,5
- CODE 1048 - RH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 2 quick tractor couplings. Dimension cm 10
- CODE 1049 - LH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 2 quick tractor couplings. Dimension cm 10
- CODE 1056 - RH hydraulic inter-row inclination with 1 double effect cylinder. Dimension cm 6,5 (applicable only during the order)
- CODE 1057 - LH hydraulic inter-row inclination with 1 double effect cylinder. Dimension cm 6,5 (applicable only during the order)
- CODE 1298 - RH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 1 double effect cylinders. Dimension cm 10 (applicable only during the order)
- CODE 1299 - LH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 1 double effect cilindres. Dimension cm 10 (applicable only during the order)
- CODE 1241 - RH hydraulic wheel adjustment with 1 cylinder doble effect (applicable only during the order)
- CODE 1242 - LH ydraulic wheel adjustment with 1 cylinder double effect (applicable only during the order)
- CODE 0982 - Blade with clod breaker, fin and feeler pin cm 45 (additionally at the standard blade)
- CODE 0695 - Blade with clod breaker, fin and feeler pin cm 65 (additionally to standard blade)
- CODE 1407 - LH blade with clod breaker, foreshortned fin and feeler pin cm 45 for limited inter-row work (to apply with LH fender with delimiter disc CODE 1406)
- CODE 1407 - RH blade with clod breaker foreshortned fin and feeler pin cm 45 for limited inter-row work (to apply with RH fender with delimiter disc CODE 1405)
- CODE 1160 - RH non-stop feeler pin holder
- CODE 1161 - LH non-stop feeler pin holder
- CODE 1085 - RH oscillating feeler pin holder adjustable in height
- CODE 1086 - LH oscillating feeler pin holder adjustable in height
- CODE 1046 - RH adjustable fender for the earth [cannot be used at the same time as the RH lifter plough kit (code 0702) or LH lifter plough kit (code 0725)]
- CODE 1047 - LH adjustable fender for the earth [cannot be used at the same time as the RH lifter plough kit (code 0702) or LH lifter plough kit (code 0725)]

- CODE 1409 - RH shock absorber for ground cover CODE 1046 recommended on tool carrier in reversible and front version
- CODE 1405 - RH fender with adjustable delimiter disc for limited inter-row work [to be used at the same time as RH circular cutter diam. 250 (code 1403) and/or RH cm 45 inter-row blade with foreshortened lifter plough kit (code 1407)]
- CODE 1410 - LH shock absorber for ground cover CODE 1047 recommended on tool carrier in reversible and front version
- CODE 1406 - LH fender with adjustable delimiter disc for limited inter-row work [to be used at the same time as LH circular cutter diam. 250 (code 1404) and/or RH cm 45 inter-row blade with foreshortened lifter plough kit (code 1408)]
- CODE 1050 - RH stump cleaner for inter-row kit (applicable simultaneously at following inter-row tools: inter-row blade, plant lifting ploughshare, circular cutter, rotary plant lifter and traction disk set)
- CODE 1051 - LH stump cleaner for inter-row kit (applicable simultaneously at following inter-row tools: inter-row blade, plant lifting ploughshare, circular cutter, rotary plant lifter and traction disk set)
- CODE 0483 - RH sled for terrain with stones or superficial roots
- CODE 1154 - LH sled for terrain with stones or superficial roots
- CODE 1187 - RH 45 cm inter-row plant lifting ploughshare
- CODE 1188 - LH 45 cm inter-row plant lifting ploughshare
- CODE 1268 - RH 55 cm inter-row plant lifting ploughshare
- CODE 1269 - LH 55 cm inter-row plant lifting ploughshare
- CODE 0702 - RH plant lifting plough kit with front depth directional wheel [cannot be used at the same time as the adjustable RH/LH ground cover cod. 1046/1047]
- CODE 0725 - LH plant lifting plough kit with front depth directional wheel [cannot be used at the same time as the adjustable RH/LH ground cover cod. 1046/1047]
- CODE 0488 - RH no traction bulldozer-disk diam. 320
- CODE 1157 - LH no traction bulldozer-disk diam. 320
- CODE 1267 - Adjustable no-traction universal rounded tiller discs
- CODE 1265 - Universal no traction adjustable ridger bit discs
- CODE 1313 - Universal no traction adjustable 2 set serrated ridger discs complete with cleaners on first disk
- CODE 1342 - Kit hydraulics system for work with rotary brushes, mowers head, mini choppers head and rotary mowers head when RH and LH NON STOP PATENTED VALVE are not apply (only when ordering - necessary hydraulic system)
- CODE 1247 - RH vertical wires mower with adapter for Expo versions and wheel with mechanical adjustment for depth adjustment (without patented valves requires application CODE 1341)
- CODE 1248 - LH vertical wires mower with adapter for Expo versions and wheel with mechanical adjustment for depth adjustment (without patented valves requires application CODE 1342)
- CODE 0718 - RH traction mini-shredder head (without patented valves requires application CODE 1341)

- CODE 1040 - LH traction mini-shredder head (without patented valves requires application CODE 1342)
- CODE 0720 - RH traction mower head with blades or strings diam. 500 (without patented valves requires application CODE 1341)
- CODE 1041 - LH traction mower head with blades or strings diam. 500 (without patented valves requires application CODE 1342)
- CODE 1150 - RH hydraulic rotary brush with gear motor and oscillating adapter (without patented valves requires application CODE 1341)
- CODE 1151 - LH hydraulic rotary brush with gear motor and oscillating adapter (without patented valves requires application CODE 1342)

[Print this page](#)