

FUTURA TOP



Cultivator with 30x30 spiral spring and cage roller

Pumps connected directly to the tractor power take-off (for rubber-tyred and crawler tractors)

Kit including multiplier double pump, hoses, filters, tank and oil

Double heat exchanger with double thermostat

Electro-hydraulic distributor to control 3 double effect cylinders

8-channel multifunction electronic control unit without relay

55 cm RH and LH side inter-row blades with multifunction joystick for manual emergency blade return

Bulldozer-like tilling spur

4,5 - 21 - 26 cm ploughshare (to specify during the order)









Hydraulic roller adjustment with multifunction joystick


Depth adjustment wheels with bearings (cannot be installed on Futura 3-5S-5)

RH fin (only for Futura 5)

LH fin (only for Futura 5)

RH and LH side widening with multifunction joystick

Model								
Futura TOP 3	0766	30 - 50	3	15 + 15	88 / 118	20	128 / 170	413
Futura TOP 5S	0767	40 - 70	5	15 + 15	128 / 158	20	168 / 210	620
Futura TOP 5	0768	40 - 70	5	15 + 15	148 / 178	20	188 / 230	625
Futura TOP 7	0769	60 - 90	7	15 + 15	163 / 193	20	203 / 245	665
Futura TOP 9	0770	60 - 90	9	15 + 15	208 / 238	20	248 / 290	718

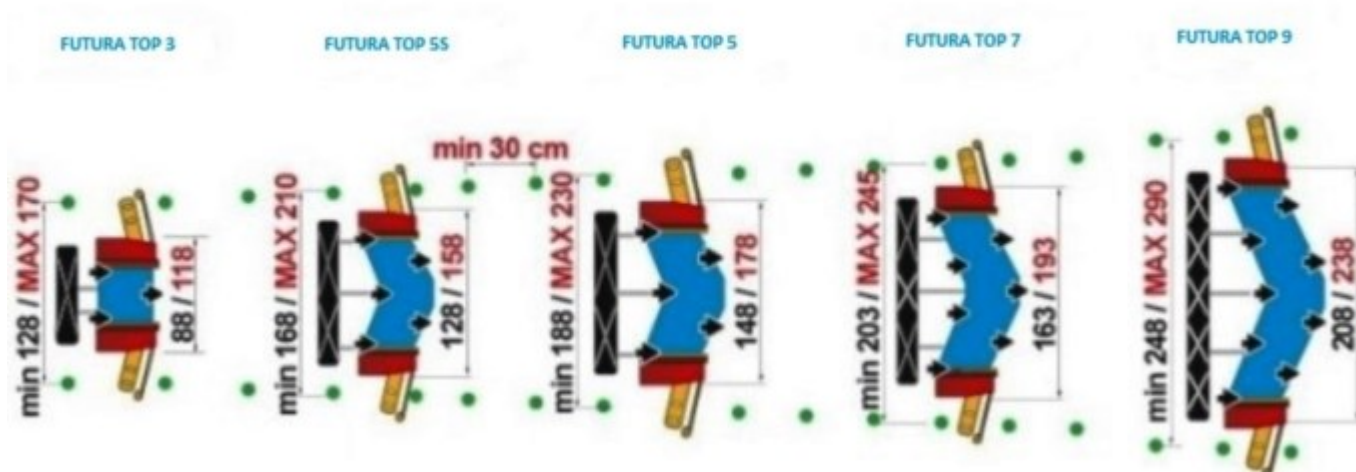

Optional

- CODE 1328 - RH and LH set 3 kit adapters in boron steel complete of reversible chisel and laterals fins

- CODE 1330 - Set 5 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins

- CODE 1332 - Set 7 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins

- CODE 1334 - Set 9 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins

- CODE 1052 - RH button for feeler pin deactivation to work with the utensil in the tall grass, to avoid that the feeler pin goes back in when is not necessary (applicable only during the order)

- CODE 1053 - LH button for feeler pin deactivation to work with the utensil in the tall grass, to avoid that the feeler pin goes back in when is not necessary (applicable only during the order)

- CODE 0698 - RH hydraulic inter-row inclination with 2 quick tractor couplings. Dimension cm 6,5

- CODE 0724 - LH hydraulic inter-row inclination with 2 quick tractor couplings. Dimension cm 6,5

- CODE 1048 - RH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 2 quick tractor couplings. Dimension cm 10

- CODE 1049 - LH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 2 quick tractor couplings. Dimension cm 10

- CODE 1056 - RH hydraulic inter-row inclination with 1 double effect cylinder. Dimension cm 6,5 (applicable only during the order)

- CODE 1057 - LH hydraulic inter-row inclination with 1 double effect cylinder. Dimension cm 6,5 (applicable only during the order)

- CODE 1298 - RH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 1 double effect cylinders. Dimension cm 10 (applicable only during the order)

- CODE 1299 - LH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 1 double effect cylinders. Dimension cm 10 (applicable only during the order)

- CODE 0982 - Blade with clod breaker, fin and feeler pin cm 45 (additionally at the standard blade)

- CODE 0695 - Blade with clod breaker, fin and feeler pin cm 65 (additionally to standard blade)

- CODE 1160 - RH non-stop feeler pin holder

- CODE 1161 - LH non-stop feeler pin holder

- CODE 1085 - RH oscillating feeler pin holder adjustable in height

- CODE 1086 - LH oscillating feeler pin holder adjustable in height

- CODE 1050 - RH stump cleaner for inter-row kit (applicable simultaneously at following inter-row tools: inter-row blade, plant lifting ploughshare, circular cutter, rotary plant lifter and traction disk set)

- CODE 1051 - LH stump cleaner for inter-row kit (applicable simultaneously at following inter-row tools: inter-row blade, plant lifting ploughshare, circular cutter, rotary plant lifter and traction disk set)

- CODE 0483 - RH sled for terrain with stones or superficial roots

- CODE 1154 - LH sled for terrain with stones or superficial roots

- CODE 1187 - RH 45 cm inter-row plant lifting ploughshare

- CODE 1188 - LH 45 cm inter-row plant lifting ploughshare
- CODE 1268 - RH 55 cm inter-row plant lifting ploughshare
- CODE 1269 - LH 55 cm inter-row plant lifting ploughshare
- CODE 0488 - RH no traction bulldozer-disk diam. 320
- CODE 1157 - LH no traction bulldozer-disk diam. 320
- CODE 1267 - Adjustable no-traction universal rounded tiller discs
- CODE 1265 - Universal no traction adjustable ridger bit discs
- CODE 1313 - Universal no traction adjustable 2 set serrated ridger discs complete with cleaners on first disk

[Print this page](#)