

FUTURA TOP SPECIAL



Cultivator with hydraulic widening, 30x30 loop springs with releasable rods and cage roller

It gives the possibility to increase or decrease the number of springs for adapting to different widths of the vineyards. It has a quick release system of springs to eliminate

On demand: power take-off high (for rubber-tyred tractors), low (for crawler tractors) or with pumps directly connected to the tractor power take-off (for rubber-tyred and crawler tractors). If it is equipped with ascent and descent system, pumps are directly connected to the tractor power take-off

Kit including multiplier, double pump, hoses, filters, tank and oil

Double heat exchanger with double thermostat

Electro-hydraulic distributor to control 3 cylinders double effect

18-channel multifunction electronic control unit without relay









55 cm RH and LH side inter-row blades with multifunction joystick for manual emergency blade return


Bulldozer-like tilling spur

4,5 - 21 - 26 cm ploughshare (to specify during the order)

Hydraulic roller adjustment with multifunction joystick

RH and LH side widening with multifunction joystick

Model	 CODE							
Futura TOP special 3S	1115	30 - 50	3	15 + 15	75	20	115 / 157	780
Futura TOP special 5/7 S	1116	60 - 90	5/7	30 + 30	112	20	152 / 224	930
Futura TOP special 5	1021	40 - 70	5	50 + 50	130	20	170 / 218	880
Futura TOP special 7	1022	60 - 90	7	50 + 50	130	20	170 / 250	930
Futura TOP special 9	1023	60 - 90	9	50 + 50	130	20	170 / 285	980
Futura TOP special 11	1376	60 - 90	11	60 + 60	170	20	210 / 342	1055
Futura TOP special 13	1216	60 - 90	13	60 + 60	197	20	237 / 370	1130
Futura TOP special 15	1375	60 - 90	15	80 + 80	197	20	237 / 407	1160
Futura TOP special 17	1217	60 - 90	17	100 + 100	210	20	250 / 460	1195

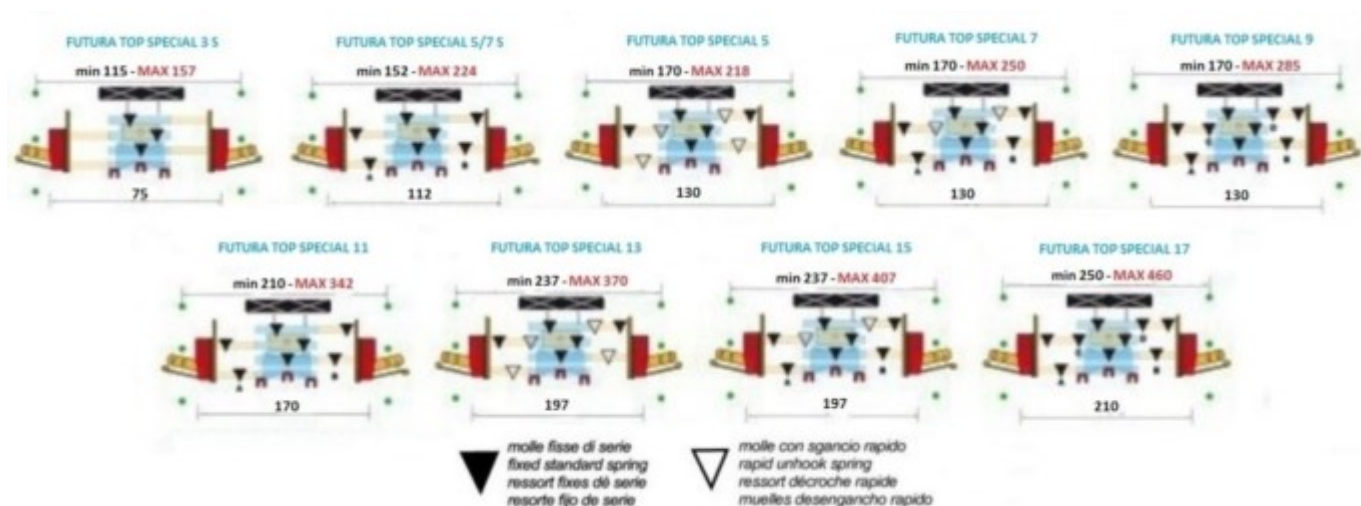

Optional

- CODE 1163 - Extra charge for folding roller with 2 quick tractor couplings (2 hydraulic cylinders roll-over and adjustment - optional applicable only when ordering)

- CODE 1164 - Electro-mechanic adjustment depth holes roller system (optional applicable only when ordering)
- CODE 1076 - Pair of short support chokers for springs A and B with resting choker on the frame and fixing pin (for Futura 7 and 9)
- CODE 1077 - Pair of long support chokers for springs C and D with resting choker on the frame and fixing pin (for Futura special 7 and 9)
- CODE 1328 - RH and LH set 3 kit adapters in boron steel complete of reversible chisel and laterals fins
- CODE 1330 - Set 5 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins
- CODE 1332 - Set 7 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins
- CODE 1334 - Set 9 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins
- CODE 1338 - Set 13 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins
- CODE 1340 - Set 17 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins
- CODE 1052 - RH button for feeler pin deactivation to work with the utensil in the tall grass, to avoid that the feeler pin goes back in when is not necessary (applicable only during the order)
- CODE 1053 - LH button for feeler pin deactivation to work with the utensil in the tall grass, to avoid that the feeler pin goes back in when is not necessary (applicable only during the order)
- CODE 1059/1062 - RH and LH depth adjustment and side stability control toothed wheels with rods to the frame adjustable in height and width, to be mounted when removing the roller (cannot be installed on Futura Special 3 - can install only if DOESN'T climb ascent and descent system)
- CODE 1060/1063 - RH and LH depth adjustment and side stability control toothed wheels with hydraulic adjustment with 4 quick tractor couplings with rods to the frame adjustable in height and width, to be mounted when removing the roller (cannot be installed on Futura Special 3 - can install only if DOESN'T climb ascent and descent system)
- CODE 0698 - RH hydraulic inter-row inclination with 2 quick tractor couplings. Dimension cm 6,5
- CODE 0724 - LH hydraulic inter-row inclination with 2 quick tractor couplings. Dimension cm 6,5
- CODE 1048 - RH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 2 quick tractor couplings. Dimension cm 10
- CODE 1049 - LH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 2 quick tractor couplings. Dimension cm 10
- CODE 1056 - RH hydraulic inter-row inclination with 1 double effect cylinder. Dimension cm 6,5 (applicable only during the order)
- CODE 1057 - LH hydraulic inter-row inclination with 1 double effect cylinder. Dimension cm 6,5 (applicable only during the order)
- CODE 1298 - RH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 1 double effect cilinders. Dimension cm 10 (applicable only during the order)
- CODE 1299 - LH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 1 double effect cilinders. Dimension cm 10 (applicable only during the order)
- CODE 0982 - Blade with clod breaker, fin and feeler pin cm 45 (additionally at the standard blade)
- CODE 0695 - Blade with clod breaker, fin and feeler pin cm 65 (additionally to standard blade)

- CODE 1160 - RH non-stop feeler pin holder
- CODE 1161 - LH non-stop feeler pin holder
- CODE 1085 - RH oscillating feeler pin holder adjustable in height
- CODE 1086 - LH oscillating feeler pin holder adjustable in height
- CODE 1050 - RH stump cleaner for inter-row kit (applicable simultaneously at following inter-row tools: inter-row blade, plant lifting ploughshare, circular cutter, rotary plant lifter and traction disk set)
- CODE 1051 - LH stump cleaner for inter-row kit (applicable simultaneously at following inter-row tools: inter-row blade, plant lifting ploughshare, circular cutter, rotary plant lifter and traction disk set)
- CODE 0483 - RH sled for terrain with stones or superficial roots
- CODE 1154 - LH sled for terrain with stones or superficial roots
- CODE 1187 - RH 45 cm inter-row plant lifting ploughshare
- CODE 1188 - LH 45 cm inter-row plant lifting ploughshare
- CODE 1268 - RH 55 cm inter-row plant lifting ploughshare
- CODE 1269 - LH 55 cm inter-row plant lifting ploughshare
- CODE 0702 - RH plant lifting plough kit with front depth directional wheel [cannot be used at the same time as the adjustable RH/LH ground cover cod. 1046/1047]
- CODE 0725 - LH plant lifting plough kit with front depth directional wheel [cannot be used at the same time as the adjustable RH/LH ground cover cod. 1046/1047]
- CODE 0488 - RH no traction bulldozer-disk diam. 320
- CODE 1157 - LH no traction bulldozer-disk diam. 320
- CODE 1267 - Adjustable no-traction universal rounded tiller discs
- CODE 1265 - Universal no traction adjustable ridger bit discs
- CODE 1313 - Universal no traction adjustable 2 set serrated ridger discs complete with cleaners on first disk

Print this page